



MICRO-BOX

www.micro-box.com


PDF TUTORIAL

How to read Infinity Box/Dongle Serial Number (S/N)

May 2015.


STEP 01: 1. Run "Dongle Manager" - download from:

<http://server1.infinity-box.com/download/index-1.php?dir=&file=DongleManager.rar>

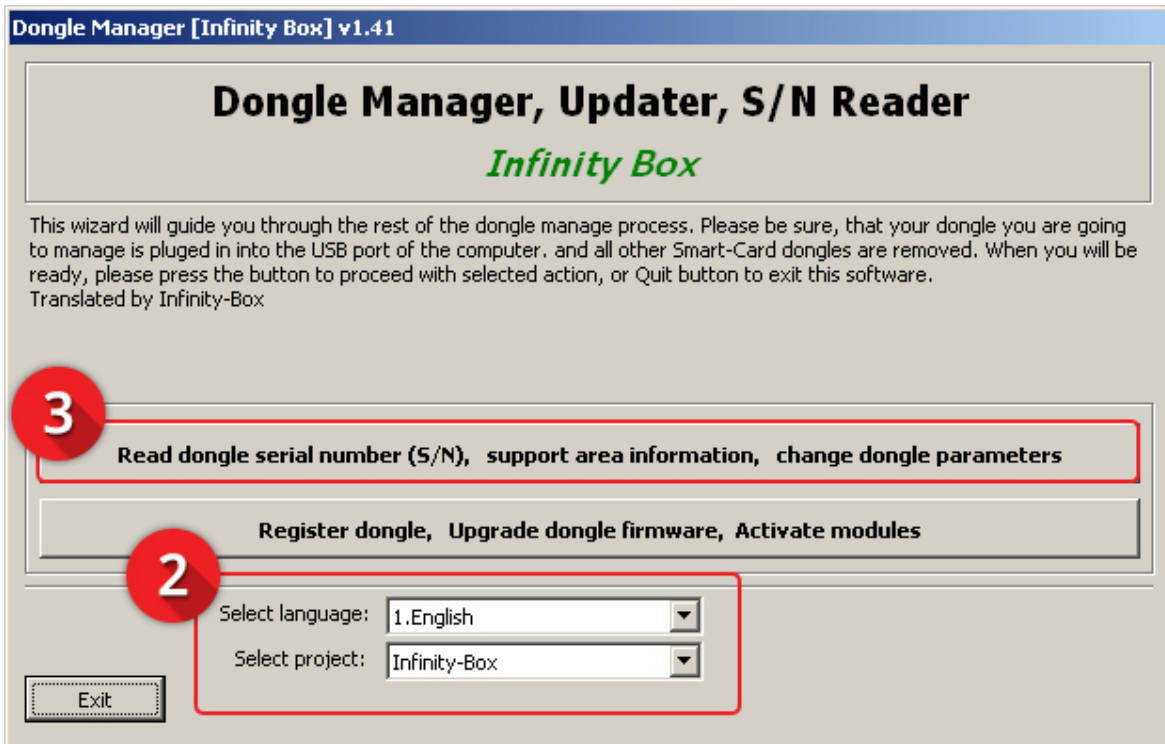

STEP 02: Select **Language** and **Box/Dongle type**

STEP 03: Click to "Read Dongle Serial Number (S/N)" button

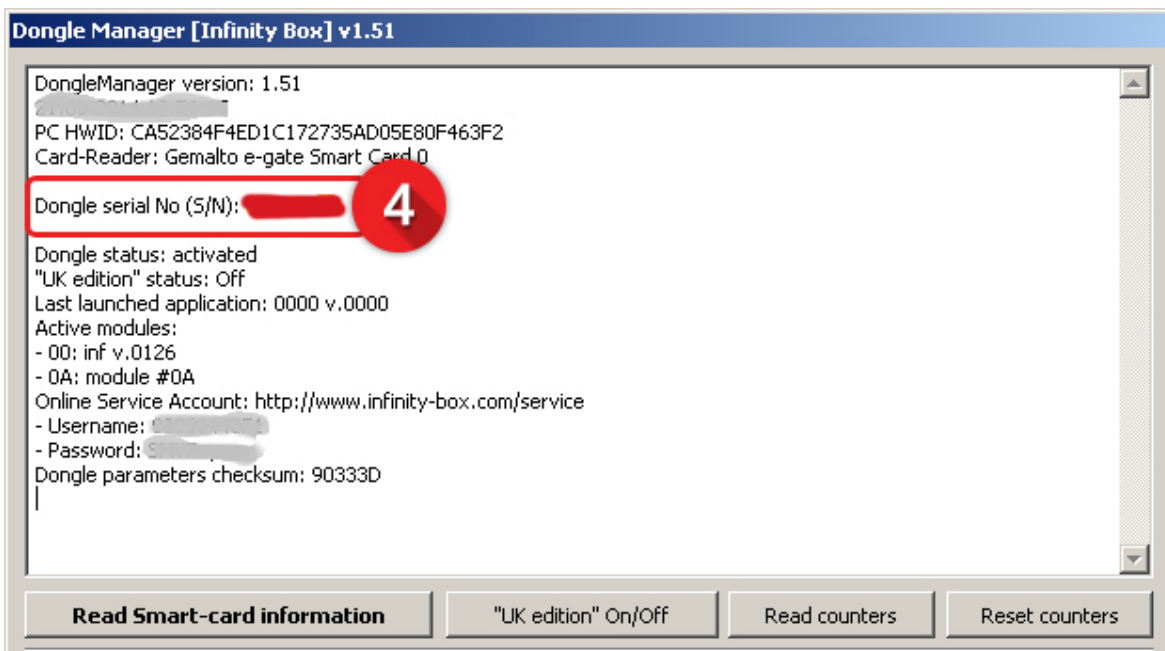

STEP 04: Here is your Serial Number